

Box 10087
Lloydminster, AB T9V 3A2
Ph: (780) 205-7368
Fx: (780) 875-1838
www.thetentguys.net



Cotton Candy

Econo Floss Machine Information Sheet

ELECTRICAL REQUIREMENTS:

- The cotton candy machine requires a 15 amp, 110 volt outlet.

HOW TO OPERATE:

1. Plug machine directly into outlet and place pan on top around head unit. Do Not use an extension cord!
2. Flip main power, motor and heat switch to the "ON" position.
3. With motor running, fill floss head about 90% full with floss sugar.
4. Cotton candy will start appearing within about 30 seconds.
5. Cotton candy should feel dry like hair. If it is damp, turn the heat down. Also, if the machine begins to smoke, turn the heat down.
6. If the floss seems to be flying out of the pan, bend the leather strips on the head up.

TO MAKE A CONE:

1. Hold the paper cone between thumb and two fingers, and break into the floss with the cone.
2. Let a little floss build up on the cone and then start to rotate the cone.
3. Roll the cone along the pan, rotating it towards the inside of the pan.
4. To bag the floss use the cone or gloved hand, put two balls of the floss into the bag.
5. Seal the bag keeping as much air in the bag as possible to preserve the look of the floss.

CLEANING INSTRUCTIONS

- Wash floss pan and wipe down the machine.
- **DO NOT CLEAN THE FLOSS HEAD.**
- Leave the left over sugar inside the machine for our experienced employees to remove.

THE TENT GUYS WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT

Should any problems arise or if you have any questions contact us anytime at (780) 205-7368.