

Box 10087  
Lloydminster, AB T9V 3A2  
Ph: (780) 205-7368  
Fx: (780) 875-1838  
www.thetentguys.net



## Hotdog Machine

### **Glenray Hotdog Machine Information Sheet**

#### ELECTRICAL REQUIREMENTS:

- The hot dog machine requires a 15 amp, 110 volt outlet.

#### HOW TO OPERATE:

- Always operate your machine on low.
- The Glenray Hotdog machine is designed so the spit turns at a speed that allows the hotdogs to baste in their own juices. This keeps the hotdog's flavour, and appearance, for quite some time rotating in the machine.
- We suggest using good quality hotdogs which should reduce any dripping or drying while cooking. When serving the hotdogs it is best to serve from the outside to center, to allow easy replacement of the hotdogs as you serve them.

#### CLEANING INSTRUCTIONS

- To clean the Glenray hotdog machine, use hot soapy water, remove shaft and wash, then thoroughly wipe down interior and exterior of machine to remove any grease.

#### TROUBLE SHOOTING CHECKLIST

- Check to see if the machine is plugged in.
- Check all switches to be sure machine is on.

Thank you for your cooperation, Have a great Event!

Should any problems arise or if you have any questions contact us  
anytime at (780) 205-7368.