

Box 10087  
Lloydminster, AB T9V 3A2  
Ph: (780) 205-7368  
Fx: (780) 875-1838  
www.thetentguys.net



## Popcorn Machine

### 8oz Popcorn Machine Information Sheet

#### ELECTRICAL REQUIREMENTS:

- The popcorn machine requires a 15 amp, 110 volt outlet.

#### HOW TO OPERATE:

1. Turn the kettle heat/motor switch to "ON".
2. Let kettle heat up for 3-5 minutes.
3. Add all popcorn supplies into kettle and close lid.
4. Once the popcorn has stopped popping, lift the lid and rotate the handle to empty the popped popcorn from the kettle then return the kettle back to the upright position.
5. Repeat this cycle for each additional batch of popcorn.
6. Turn "OFF" the kettle switch after the last batch.
7. DO NOT leave kettle switch "ON" when there is no popcorn in the kettle.

#### POPCORN BATCH

- 8oz of Popcorn kernels
- 1/3 cup Popping Oil
- Theatre Seasoning (optional)

#### CLEANING INSTRUCTIONS

- Remove any left over popcorn from the machine.
- Remove the kernel tray and empty the unpopped kernels.
- Wipe both interior and exterior of the popcorn machine with a damp cloth to remove oil.
- Wipe out inside of kettle with a paper towel.
- **IMPORTANT:** DO NOT put water or any cleaners into the kettle.

WARNING: DO NOT touch kettle when the machine is hot as it may cause serious injury.

Thank you for your cooperation, Have a great Event!

Should any problems arise or if you have any questions contact us anytime at (780) 205-7368.